

Subject
Connecting the Eliminator to a PREDATAIR

System or Parts affected

- PREDATAIR40 (H400001)
- PREDATAIR60 (H600002)
- ELIMINATOR70 (A800070)

Background

Configuring the VMAC Eliminator to run with a PREDATAIR that is connected to keyed power.

Resolution

This configuration will allow the operator to turn the Eliminator on or off as needed to reduce wear and unnecessary start up / shut down of the Eliminator.



A single-pole, single-throw (SPST) switch with a minimum 1 amp rating is required for this configuration*.

***Not supplied**

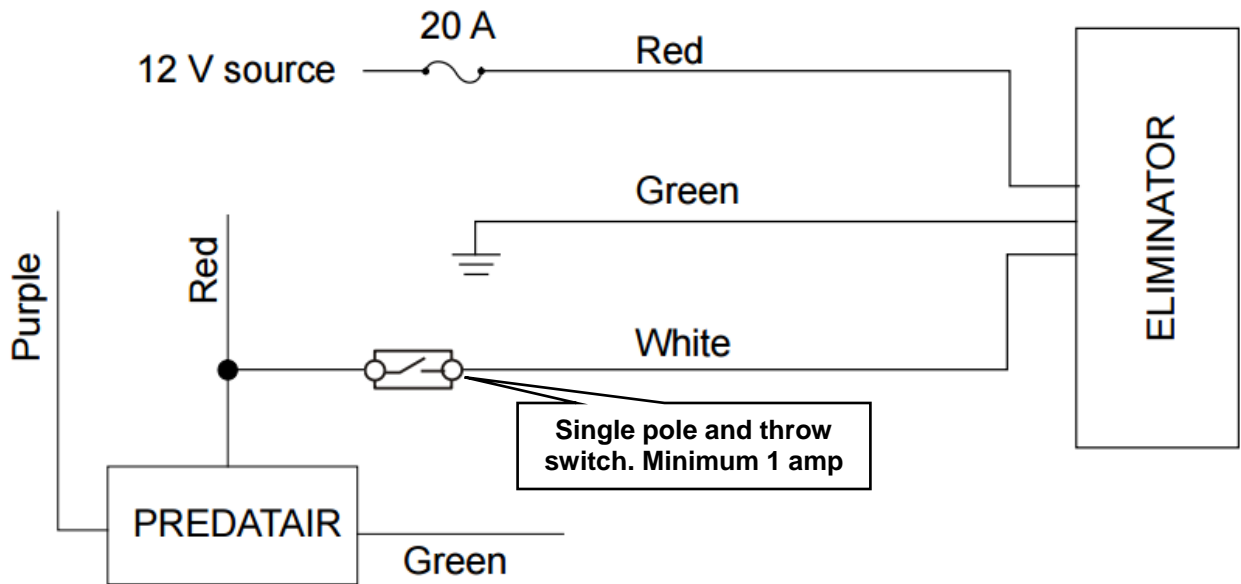


Figure 1

Document	Version	Department	Revision Details	Revised by	Tech	Engineering	Implemented
EXT-ACC-001	A	Tech	Document Release	SP 31 Jul 2015	DB 31 Jul 2015	N/A	11 Aug 2015