

SERVICE BULLETIN No. 5

Tail Tray Reinforcement

The tail tray is a horizontal bulkhead located in the tail of the fuselage just under the horizontal stabilizer. In two or three instances owners have reported cracks in this tray just forward of its at-

tachment to the rear bulkhead. The repair for such damage is shown on the sketch. It is recommended that you make the replacement shown on your airplane, whether or not cracks have yet developed.

