

Subject
DTM Generic System Flow Diagram

SYSTEM OR PARTS AFFECTED


- VMAC Direct-Transmission Mount 70 CFM air compressor systems (DTM).
- VMAC Direct-Transmission Mount air compressor & hydraulics (DTM -H)

OVERVIEW

The diagram below illustrates the generic hose connections and direction of flow in VMAC's DTM 70 CFM air compressor systems

Component locations may vary for each specific DTM air compressor system.

For additional information, refer to [VMAC Installation Manuals](#) for specific routing and installation instructions.

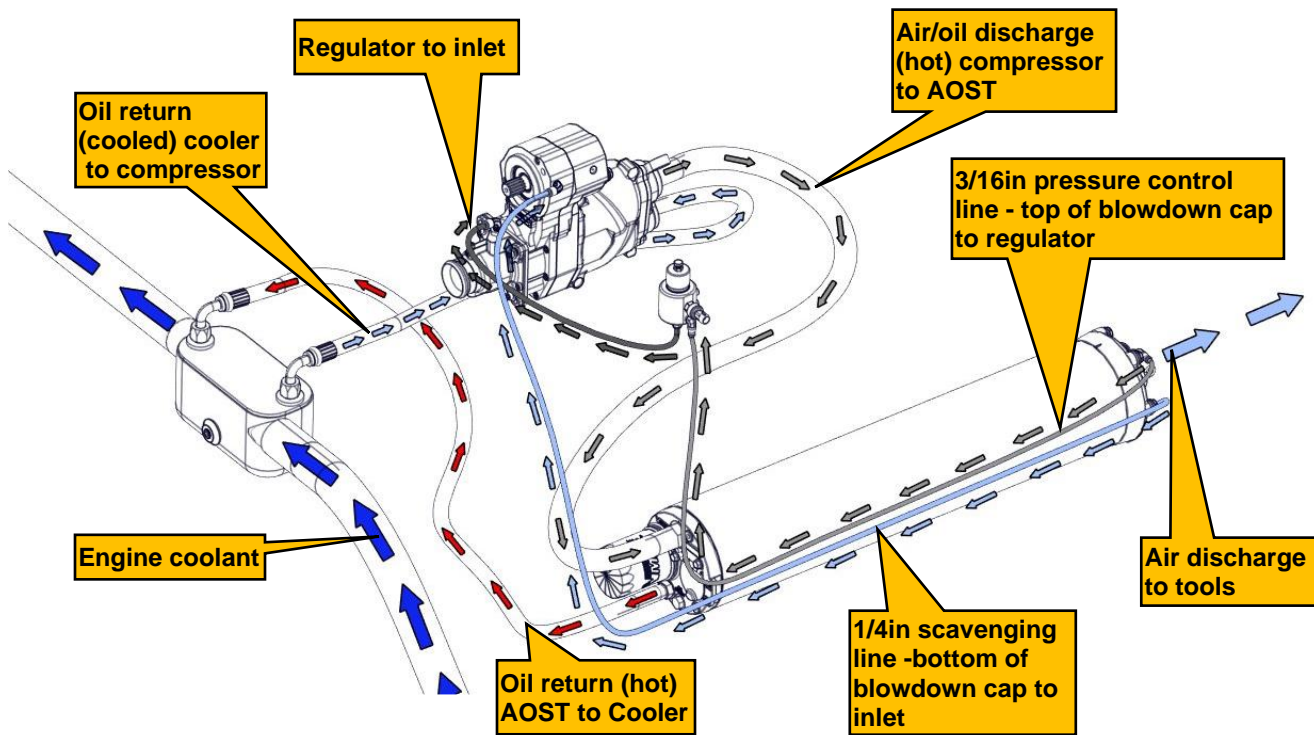

NOTE Hoses related to the air compressor system are the same in DTM and DTM-H. Components of the hydraulic system in DTM-H are not shown in the above diagram.

Version	Document	Department	Revision Details	Revised by	Tech	Engineering	Implemented
A	EXT-DTM-003	Tech	Document Release	BDJ 28Sept2021	MSP		28 Sept2021