

Piper Drawings and Manuals Available From Univair

Part Number	OEM Number	Description
-10178DWG		Piper PA-12 Electrical Installation Drawing
-10185DWG		Piper PA-12 Wing Installation Drawing
-10560DWG		Piper PA-11 Fuselage Drawing
-10625DWG		Piper PA-11/18 Wing Drawing
-10645DWG		Piper Drag Strut Installation #2 Strut Drawing
-10671DWG		Piper PA-11 Fuselage Drawing
-10710DWG		Piper Fittings Installation - Wing Butt Drawing
-10840DWG		Piper PA-11 Engine Installation Drawing
-11298DWG		Piper PA-11/18 Fuel System Drawing
-11520DWG		Piper PA-15/17 Wing Drawing
-11576DWG		Piper PA-15/17 Fuselage Drawing
-11777DWG		Piper PA-16 Wing Drawing
-11858DWG		Piper PA-16 Fuselage Drawing
-12183DWG		Piper PA-18 Fuselage Drawing
-12224DWG		Piper Fitting Installation Front Spar Drawing
-12263DWG		Piper PA-18-150 Bungee Installation Drawing
-12331DWG		Piper Edge Attachment Wing Butt Drawing
-12446DWG		Piper PA-18 Fuselage Drawing
-12447DWG		Piper PA-18 105/125/135hp Engine Installation Drawing
-12451DWG		Piper Tape Installation - Wing Ribs Drawing
-12483DWG		Piper PA-20/22 Wing Drawing
-12510DWG		Piper PA-20 Fuselage Drawing
-13049DWG		Piper PA-22 Fuselage Drawing
-13113DWG		Piper PA-22 Gear Installation Drawing
-13250DWG		Piper PA-18A Fuselage Drawing
-13724DWG		Piper PA-18 Oil Radiator Installation Drawing
-13766DWG		Piper PA-18 Wing Tank Drawing
-13808DWG		Piper PA-22 Fuselage Drawing
-13869DWG		Piper PA-22 Fuselage Drawing
-13925DWG		Piper PA-22 Fuselage Cover Drawing
-14242DWG		Piper Strut Installation - #5 Strut Drawing
-14283DWG		Piper Fittings Installation - Spar Line Drawing
-14323DWG		Piper Wing Tip Bow Installation Drawing
-14351DWG		Piper Tape Installation - Wing Drawing
-14394DWG		Piper PA-18-150 Wing Drawing
-14400DWG		Piper PA-18-150 Wing Cover Drawing
-14407DWG		Piper PA-22 Wing Drawing
-14413DWG		Piper PA-22 Wing Cover Drawing
-14433DWG		Piper Fittings Installation - Front Strut Drawing
-14454DWG		Piper PA-22 Aux Tank Installation Drawing
-14474DWG		Piper PA-22 Powerplant Installation Drawing
-14480DWG		Piper PA-18-150 to 135 Conversion Drawing
-14698DWG		Piper PA-22 Rigging Drawing
-14765DWG		Piper PA-12 Wing Drawing
-14766DWG		Piper PA-12 Wing Drawing
-15094DWG		Piper PA-22-108 Wing Drawing
-15556DWG		Piper J-3 Wing Drawing
-16543DWG		Piper PA-12 Covered Wing Drawing
-170-112	170-112	Piper Cub Engine Log
-230-201	230-201	Piper PA-22 Inspection Sheet

Piper Drawings and Manuals Available From Univair

-230-202	230-202	Piper PA-18 Inspection Sheet
-230-206	230-206	Piper PA-22-108 Inspection Sheet
-230-3000	230-3000	Piper classic Inspection Report
-24066DWG		Piper PA-12 Fuselage Drawing
-24096DWG		Piper J-3 Fuselage Drawing
-24186DWG		Piper PA-12 Fuselage Drawing
-24195DWG		Piper PA-12 Fuselage Cover
-60168DWG		Piper PA-25 Fuselage Drawing
-60208DWG		Piper PA-25 Fuselage Drawing
-60325DWG		Piper PA-25 Wing Drawing
-61093DWG		Piper PA-25 Wing Drawing
-61244DWG		Piper PA-25 Fuselage Drawing
-64031DWG		Piper PA-25 Wing Drawing
-64155DWG		Piper PA-25 Fuselage Drawing
-74443DWG		Piper J-3 Continental Engine Installation Drawing
-750-111	750-111	Piper Airframe Logbook
-752-451	752-451	Use 18PM
-75266DWG		Piper PA-12 Engine Installation Drawing
-761-823	761-823	Piper PA-18 Parts Manual
01-140DA-3	01-140DA-3	Piper L-4 Structural Repair Manual
11PM	11PM	Piper PA-11 Parts Manual
11PS	11PS	Piper PA-11 Paint Scheme
12FL	12FL	Piper PA-12 Operating Limits
12FM	12FM	Piper PA- 12 Flight Manual
12PM	12PM	Piper PA-12 Parts Manual
12PS	12PS	Piper PA-12 Paint Scheme
14FL	14FL	Piper PA-14 Operating Limits
14FM	14FM	Piper PA-14 Flight Manual
14PM	14PM	Piper PA-14 Parts Manual
14PS	14PS	Piper PA-14 Paint Scheme
15/17FM	15/17FM	Piper PA-15/17 Flight Manual
15PM	15PM	Piper PA-15/17 Parts Manual
16FM	16FM	Piper PA-16 Flight Manual
16PM	16PM	Piper PA-16 Parts Manual
16PS	16PS	Piper PA-16 Paint Scheme
17FM	17FM	Piper PA-15/17 Flight Manual
18FM135	18FM135	Piper PA-18-135 Flight Manual
18FM150	18FM150	Piper PA-18/18A-150 Flight Manual
18FM90	18FM90	Piper PA-18/19 90hp Flight Manual
18FMW	18FMW	Piper PA-18, 20, 22, 25 Winter Supplement
18PM	18PM	Piper PA-18 Parts Manual
18SFM150	18SFM150	Piper PA-18 Seaplane Flight Manual
18SFMS	18SFMS	Piper PA-18S,19S Seaplane Supplement
18WM125	18WM125	Piper PA-18 95/125hp Owners Manual
18WM135	18WM135	Piper PA-18 95/135hp Owners Manual
18WM150	18WM150	Piper PA-18-150 Pre 1974 Owners Manual
18WM150-74	18WM150-74	Piper PA-18-150 Post 1974 Owners Manual
18WM150-88	18WM150-88	Piper PA-18-150, 1988 and Later
20FM115	20FM115	Piper PA-20 115hp Flight Manual
20FM125/135	20FM125/135	Piper PA-20 125/135hp Flight Manual
20PM	20PM	Piper PA-20 Parts Manual

Piper Drawings and Manuals Available From Univair

20WM125	20WM125	Piper PA-20 115/125hp Owners Manual
20WM135	20WM135	Piper PA-20-22 135hp Owners Manual
22FM108	22FM108	Piper PA-22 108hp Flight Manual
22FM125	22FM125	Piper PA-22 125hp Flight Manual
22FM160	22FM160	Piper PA-22 160hp Flight Manual
22PM	22PM	Piper PA-22 Parts Manual
22WM108	22WM108	Piper PA-22-108 Owners Manual
22WM150	22WM150	Piper PA-22 Owners Manual
25PM	25PM	Piper PA-25 Parts Manual
J3EPM	J3EPM	Piper J-3 Early Parts Manual 1937-41
J3PM	J3PM	Piper J-3 Parts Manual
J3PS	J3PS	Piper J-3 Paint Scheme
J3SM	J3SM	Piper J-3 Service Manual
J3WM	J3WM	Piper J3-C65 Owners Manual
J4PM	J4PM	Piper J-4 Parts Manual
J4PS39	J4PS39	Piper 1939 J-4 Paint Scheme
J4PS40	J4PS40	Piper 1940 J-4 Paint Scheme
J4PS41	J4PS41	Piper 1941 J-4 Paint Scheme
J4SM	J4SM	Piper J-4 Service Manual
J5PM	J5PM	Piper J-5 Parts Manual
J5PS40	J5PS40	Piper 1940 J-5 Paint Scheme
J5PS41	J5PS41	Piper 1941 J-5 Paint Scheme
J5SM	J5SM	Piper J-5 Service Manual
L21EM	L21EM	Piper L-21 Erection & Maintenance Manual
PBLJ	PBLJ	Piper J-Series Service Bulletins
PBLPA	PBLPA	Piper PA-Series Service Aids, Bulletins, Letters & Memos